

P.O. Box 2956 · Syracuse · New York · 13220 Phone: (315) 433-1150 Fax: (315) 433-1521 Toll Free US & Canada (800) 334-0837 Email: sales@infitec.com

\$ FEATURES

- Complete Isolation Between Sensed Current and **Output Circuit**
- Output Contact Ratings up to 30 Amperes
- 5% Hysteresis to Prevent Rapid Switching
- Over current and Under current Sensing
- Encapsulated To Withstand Harshest Environment
- Designed to Sense the Beginning or Ending of a Function Via Monitored Current Flow
- UL / cUL Recognized

SPECIFICATIONS

- 1. Control.
 - 1.1 Type: Sensed current via isolated toroid sensor 1.2 Sense voltage: Up to 600 VAC

 - 1 pass 2 to 20 amperes 1.3 Sense range:
 - 2 passes 1 to 10 amperes 4 passes 0.5 to 5 amperes
 - (see connection diagram)
- 2. Input.
 - 2.1 Control circuit voltage: 24, 120 & 230 VAC 2.2 Tolerance: ± 20% of nominal 2.3 Frequency: 50 60 Hertz
- 3. Output.

 - 3.1 Type: Electromechanical relay
 3.2 Form: SPST or SPDT, isolated and non-isolated (see ordering info.)
 3.3 Rating: See 'Output Contact Rating Chart'

3.4 Life: Medium power =

Electrical - full load - 100,000 operations

Mechanical - 10,000,000 operations

High power and Heavy Duty =
Electrical - full load - 100,000 operations
Mechanical - 10,000,000 operations

- 4. Trip Point.

 - 4.1 Fixed: Specify in ordering information
 4.2 Knob adjustable: User settable thoughout sensing range (see 1.3)
 - 4.3 Tolerance: ± 20%
 - 4.4 Trip point vs. voltage & temperature: ± 5%
- 5. Protection.
 - 5.1 Transient: ±1500 volts for 150 microseconds
 - 5.2 Dielectric breakdown: 1500 volts RMS
- 6. Mechanical.
 - 6.1 Mounting: One #8 or #10 screw
 - 6.2 Control circuit termination: 1/4" quick connect
 - 6.3 Style: Surface mount / encapsulated
- 7. Environmental.
 - 7.1 Operating temperature: -20°C to +80°C 7.2 Storage temperature: -30°C to +85°C

 - 7.3 Humidity: 95% relative, non-condensing


MODE OF OPERATION

AC CURRENT SENSOR


Power is applied to the control circuit at all times. When the level of current flow in the circuit being monitored is greater than the trip point, the current sensor's control circuit contacts transfer. When the current flow in the circuit being monitored drops below the trip point, the control circuit contacts revert back to their original position.


ISSB SERIES AC CURRENT SENSOR RELAY OUTPUT



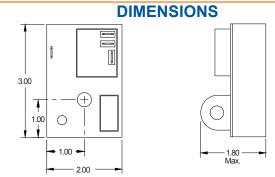

CONNECTION DIAGRAMS

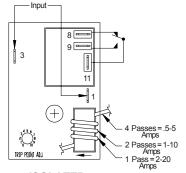

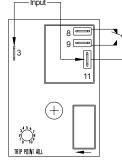

ISOLATED

NON-ISOLATED

OUTPUT CONTACT RATING CHART						
	30 VDC	125 VAC	240 VAC			
MEDIUM POWER						
N.O.	10A	10A, 1/4hp	10A, 1/4hp			
N.C.	5A	5A, 1/4hp	5A, 1/4hp			
HIGH POWER						
N.O.	20A	20A, 1hp	20A, 2hp			
N.C.	10A	10A, 1/4hp	10A, 1/2hp			
HEAVY DUTY						
N.O.	30A	30A, 1hp	30A, 2hp			

ORD	EDIA		NICO	DM	A TIO	NI
UKD		I DV	NEO	T IVI	4 I IU	IV

ORDERING INFORMATION						
CEDIEC	CONTROLCIRCUIT		TRIPPOINTADJUSTMENT	TRIPPOINTSETTING		
SERIES	VOLTAGE	OUTPUT	TRIPPOINT ADJUSTMENT	(fixed adj. only)		
ISSB	4 - 24 VAC 5 - 120 VAC 6 - 230 VAC	J (- , ,	0 - Knob 1 - Fixed	Specify Trip Current To Nearest 1 Ampere		