

FT 55-RLAM – **WOW** demonstration I

1. **Mount** your RLAM within its working range to a table, looking downwards to the tabletop
2. **Connect** the sensor with your USB master (SensIO) to your computer and open the SensoTune app
3. **SensoTune** app setup
 - i. Change the process data configuration to “Measurement output”
 - ii. Set min / max values in the live view
 - i. Try +/- .1 of the current value
4. **Knock** softly on the table